


# Instruction Manual

## Demo Board

1. Install "UVI\_Checker\_BLE.apk" file on you mobile phone. ( Now only install in Android, and now developing Apple app.)
2. Turn on Bluetooth on Demo Board

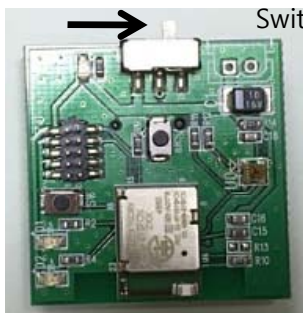


Switch off




Switch on

3. Turn on Bluetooth on your mobile phone. Click search button. When RECOS-HRM is searched on the phone, connect with phone.

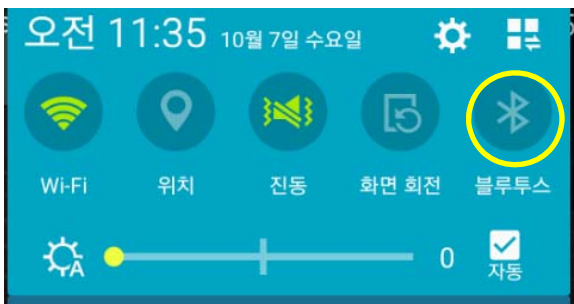

Bluetooth on

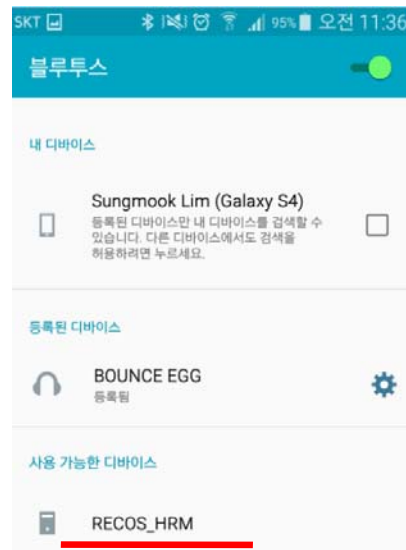

4. Start Smart UVI Checker BLE Application → Make Demo board face to sun or UV light and touch Smart UVI Checker app's measure button. → You can check UVI.

